

2D Barcode Scanner User's Manual



Enter setup

This user's manual is designed for 2D barcode scanner. For detailed usage information, please download the complete user's manual from our website or from our authorized distributors.

How to program this scanner:

- 1.Scan the "Enter setup" code
- 2.Scan the settings codes which you need
- 3.Scan the "Exit setup" code.

Setup is now complete and the scanner is ready to be used with your selected settings.

System settings

Factory default settings



Factory default settings

Note: Factory default settings are marked with an asterisk "*" in this manual.

Interface



USB-KBW



USB Virtual Com



RS-232

Exit setup



Enter setup

Barcode types



Deactivate 1D barcode scanning



*Activate scanning of all barcode types



Deactivate 2D barcode scanning

Reading mode



*Manual mode



Continuous mode



Automatic mode

Sensitivity



*High



Middle

Exit setup



Enter setup

Sound



Off



*On



Low



Medium



*High

Aiming



*Reading Normal



Off



On

Exit setup





Enter setup

USB-KBW Setting

Keyboard Character output



*Original data output



Transgenic output



Activate national tax ticket



Deactivate national tax ticket



GBK to Notepad



GBK to Word



*Deactivate GBK

Exit setup



Enter setup

Case Conversion



Convert All to Upper Case



Case interchange



Convert All to Lower Case



*Conversion

Add terminal key stroke



*Add terminal CR



Add terminal CR+LF



Add terminal TAB



Deactivate terminal addition

Exit setup



Enter setup

OCR/Passport Setting



Passport ON



Passport OFF

Keyboard layout



*USA



Russia



France



Germany



Spain



Sweden



Italy



Turkey Q

Exit setup



Enter setup

RS-232 setting

Baud rate



*9600



1200



2400



4800



19200



38400



57600



115200

Exit setup

